

Reference : GRIL BAS PM AVEC TIROIR G32

Conforms to standard : EN 1860-1 : 2003


- This grill cannot stand alone, it must be set up on purpose-built stonework.

Technical characteristics:

- Grill weight : 21 kg
- Grill dimensions : 520 x 400 x 230 mm
- Insert dimensions : 450 x 340 x 50 mm
- Whole grill made out of cast-iron
- Use : charcoal
- Grill cooking surface : 455 x 340 mm
- Ash drawer


Options :

- Lid (1) : BLACOU000

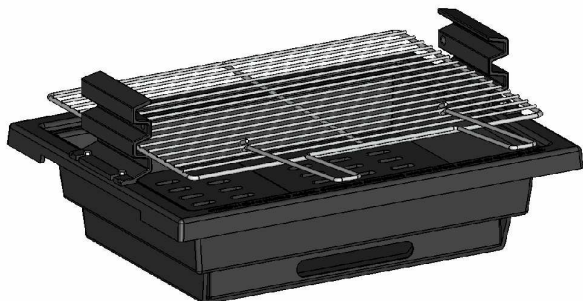


2 year warranty

GRILL G32

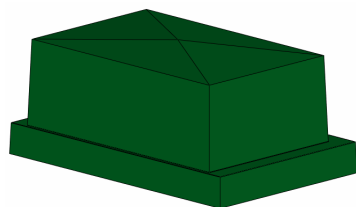

1	Lid BLACOU000
---	------------------

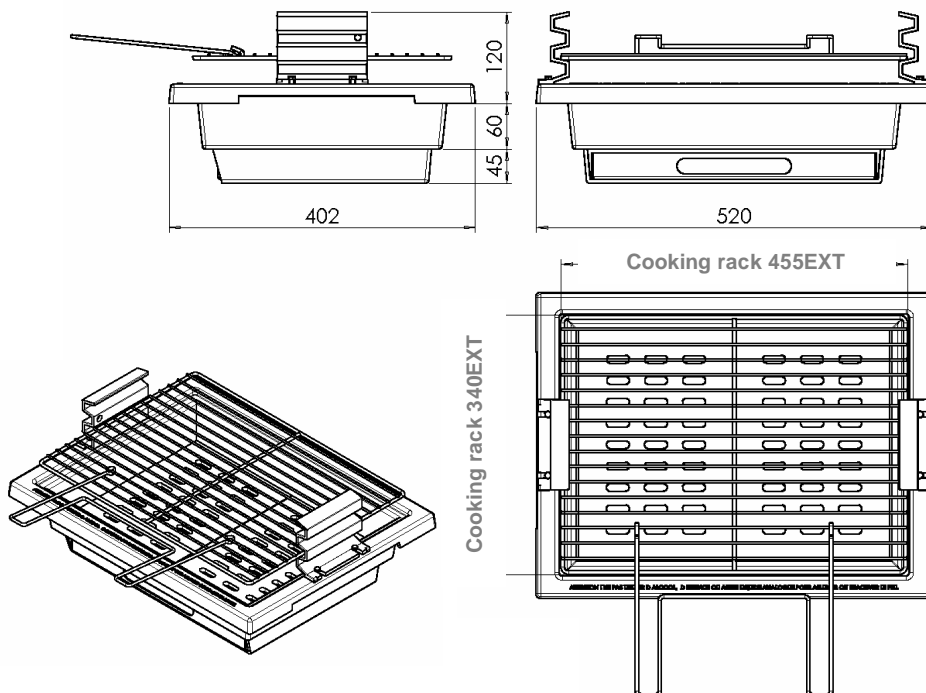

WARNING ! This barbecue will get very hot. Do not move it while in use.


WARNING ! Do not use in enclosed rooms.

WARNING ! Do not use alcohol, petrol or any other similar liquid to light or reignite the barbecue.


WARNING ! Do not leave the barbecue within reach of children or pets.

1 ASSEMBLY


Screws, washers
and nuts pack

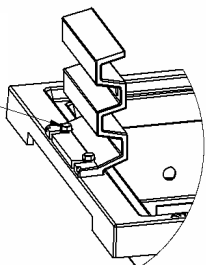


Bolt the racks on the grill
box with the provided
screws, washers and nuts

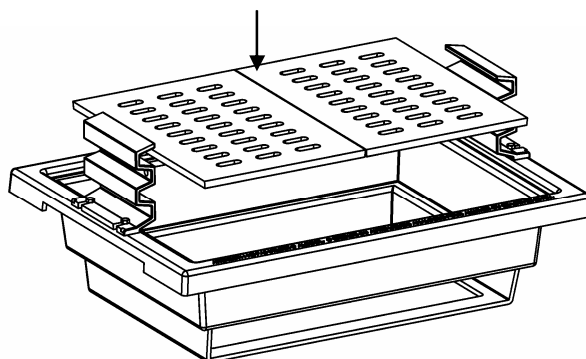

Place the cast-iron
grates in the box


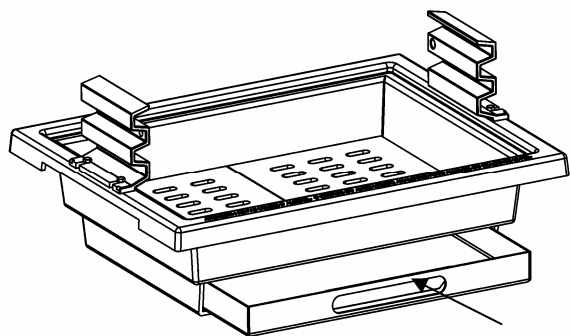


Place the ash drawer
underneath

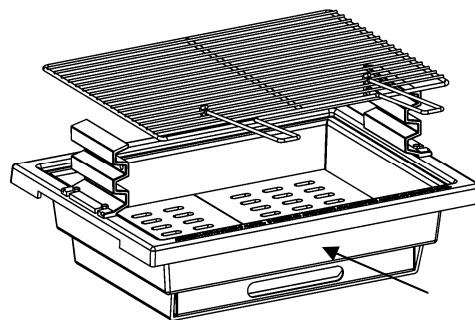


Drawer in use
position

2 ADVICE

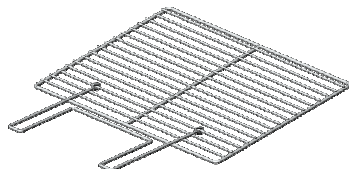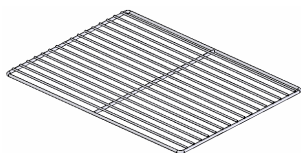


To avoid risks, the
handle must be
removed from the rack
during cooking

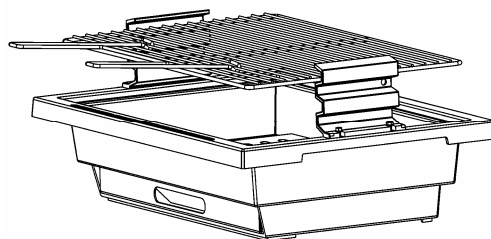

Cooking rack conforms to the regulations in force

Recommendations for use

- The maximum authorised load of charcoal must not exceed $\frac{3}{4}$ of the height of the grill box.
- The barbecue must not be used without the ash drawer in use position under any circumstances.
- Before cooking with it for the first time, the grill must be heated and fuel kept glowing for at least 30 min.
- Cover the fuel with a layer of ash before you cook each time.
- In grill position, the cooking rack can be placed at 3 different heights (following pattern).

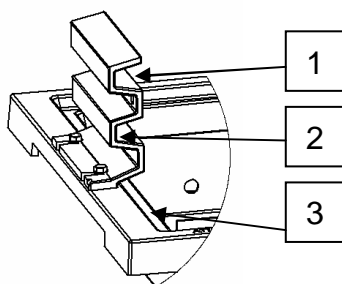


- Wait until the barbecue has fully cooled down before removing the ash.

Care and storage advice

- We recommend that you cover the grill if it is left outdoors, to protect it from bad weather and damp, particularly when it not used for a long period of time.
- Check that the grill and its accessories are cool enough before cleaning them.
- Clean the cooking rack with hot water and soap.
- Clean the grill with a wooden or flexible plastic scraper to remove excess grease.
- Check the drawer after each use. If there is a lot of ash or grease, throw the contents away in an appropriate metal container for this purpose.

GRILL G32

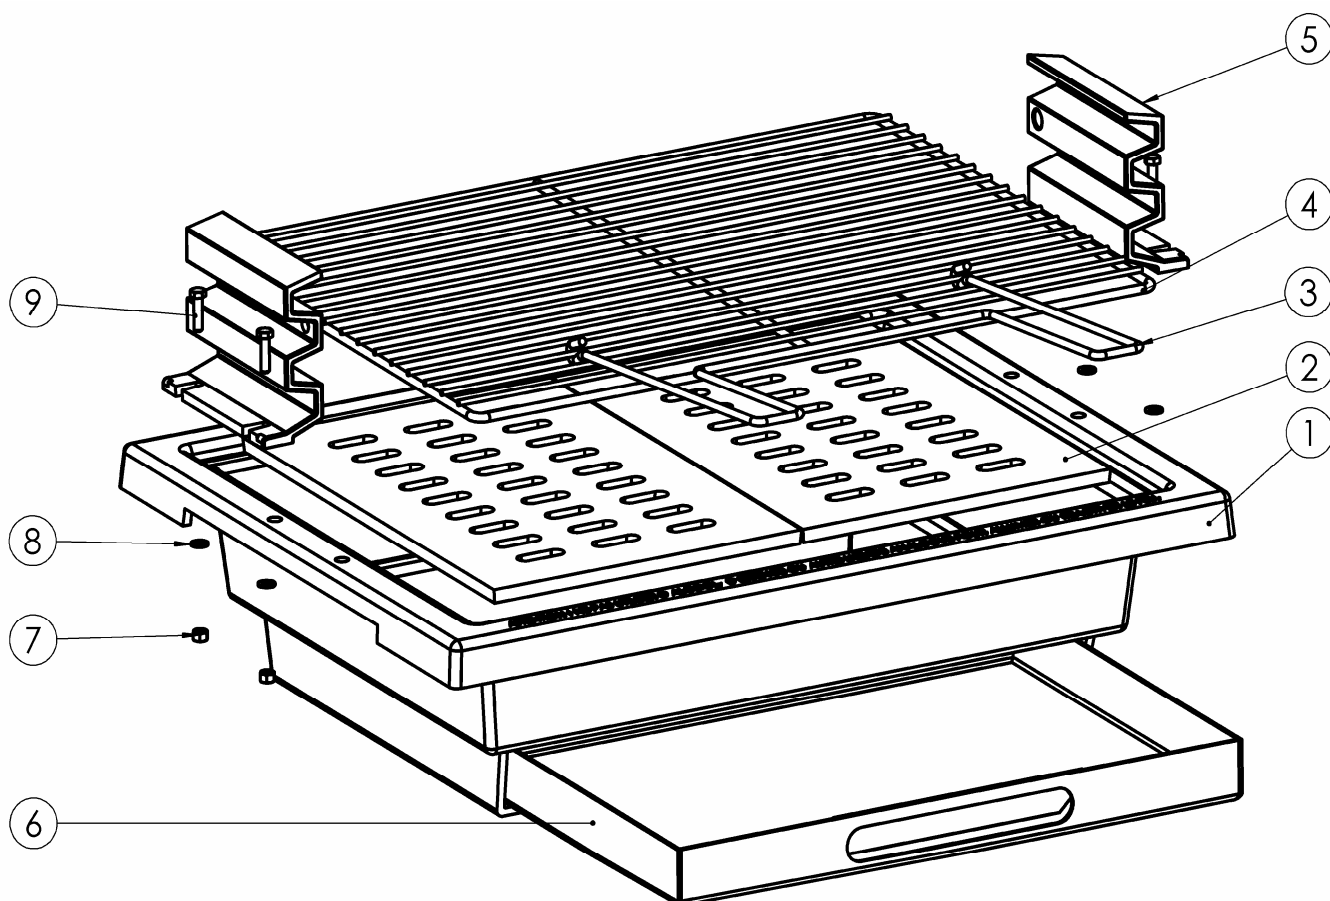

NOMENCLATURE 20 PARTS		
REF	NAME	QTY
1	CUVE	1
2	GRILLE FONTE	2
3	POIGNEE	1
4	GRILLE	1
5	CREMAILLERE	2
6	TIROIR	1
7	ECROU	4
8	RONDELLE	4
9	VIS	4